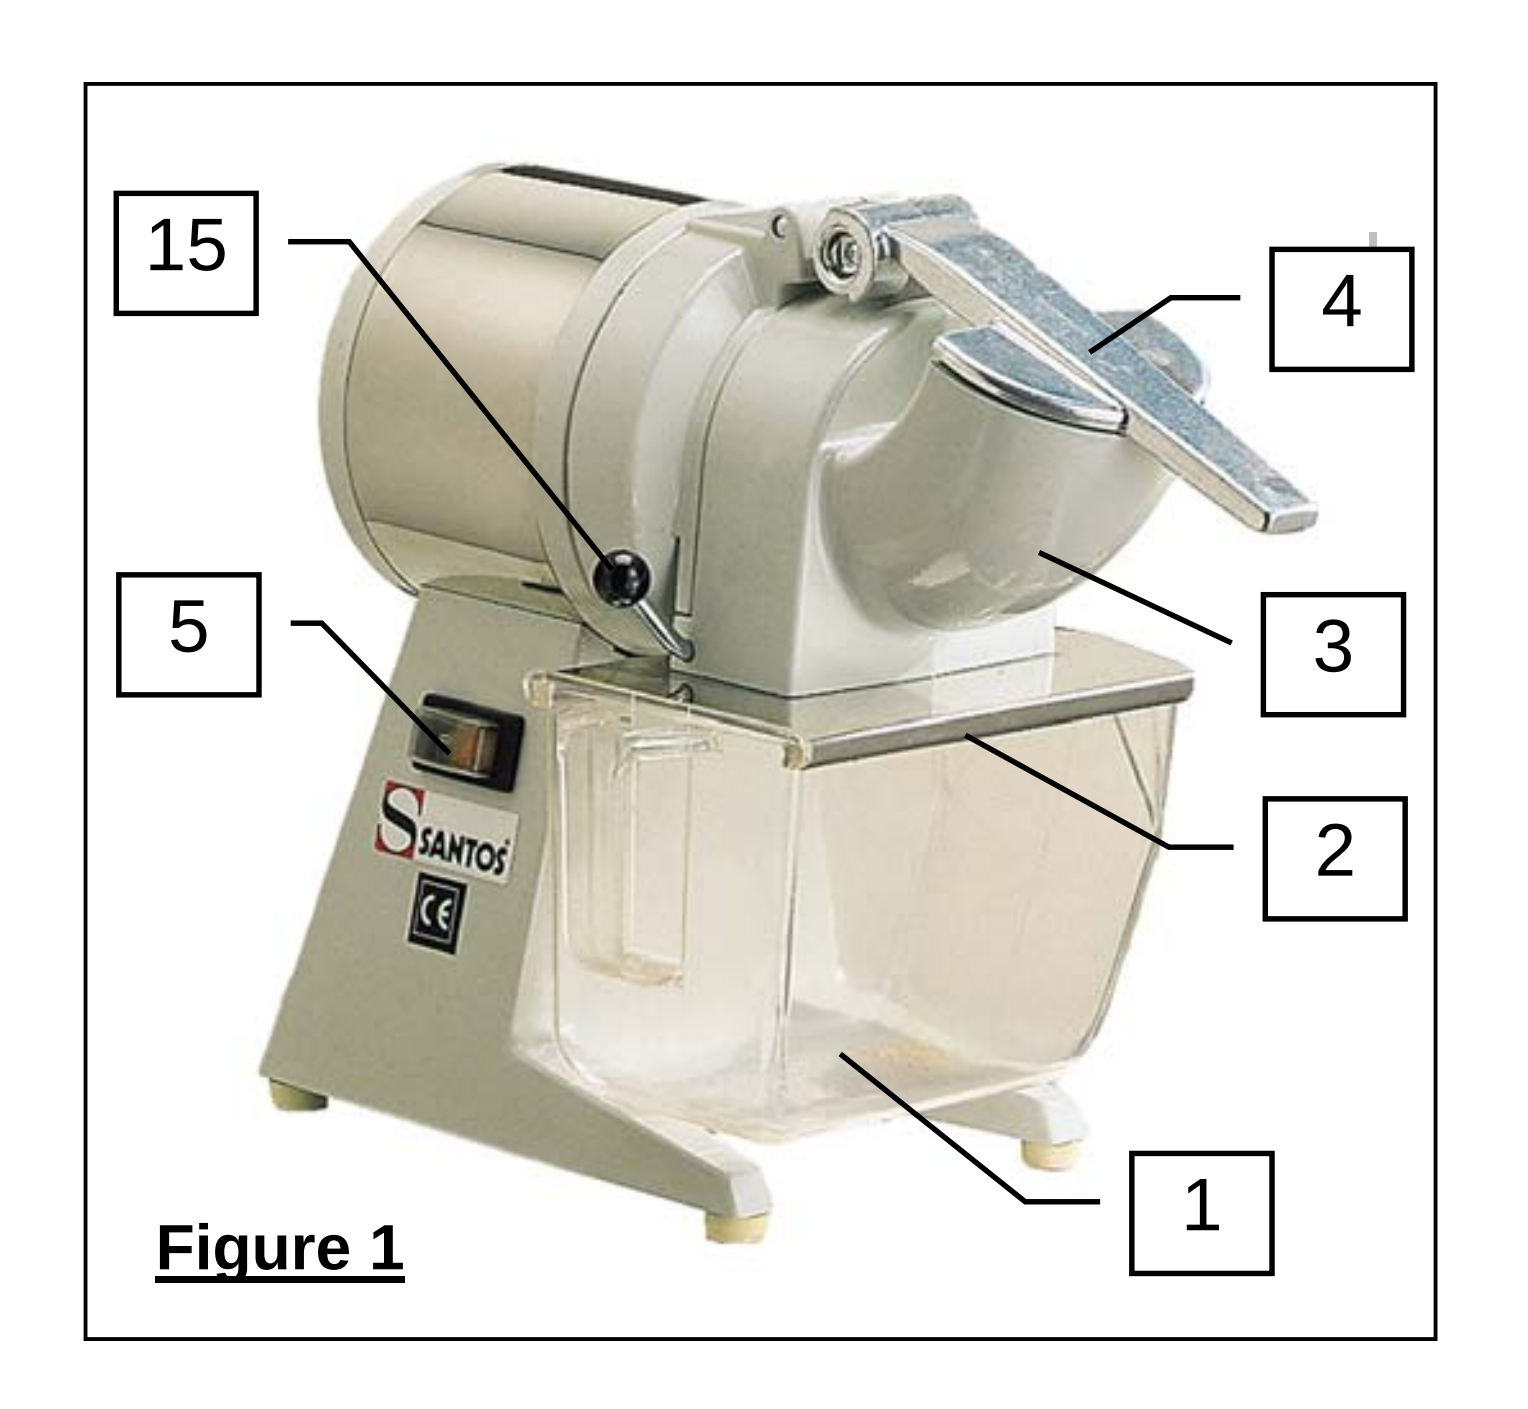


Figure 1



Figure 2



Figure 3

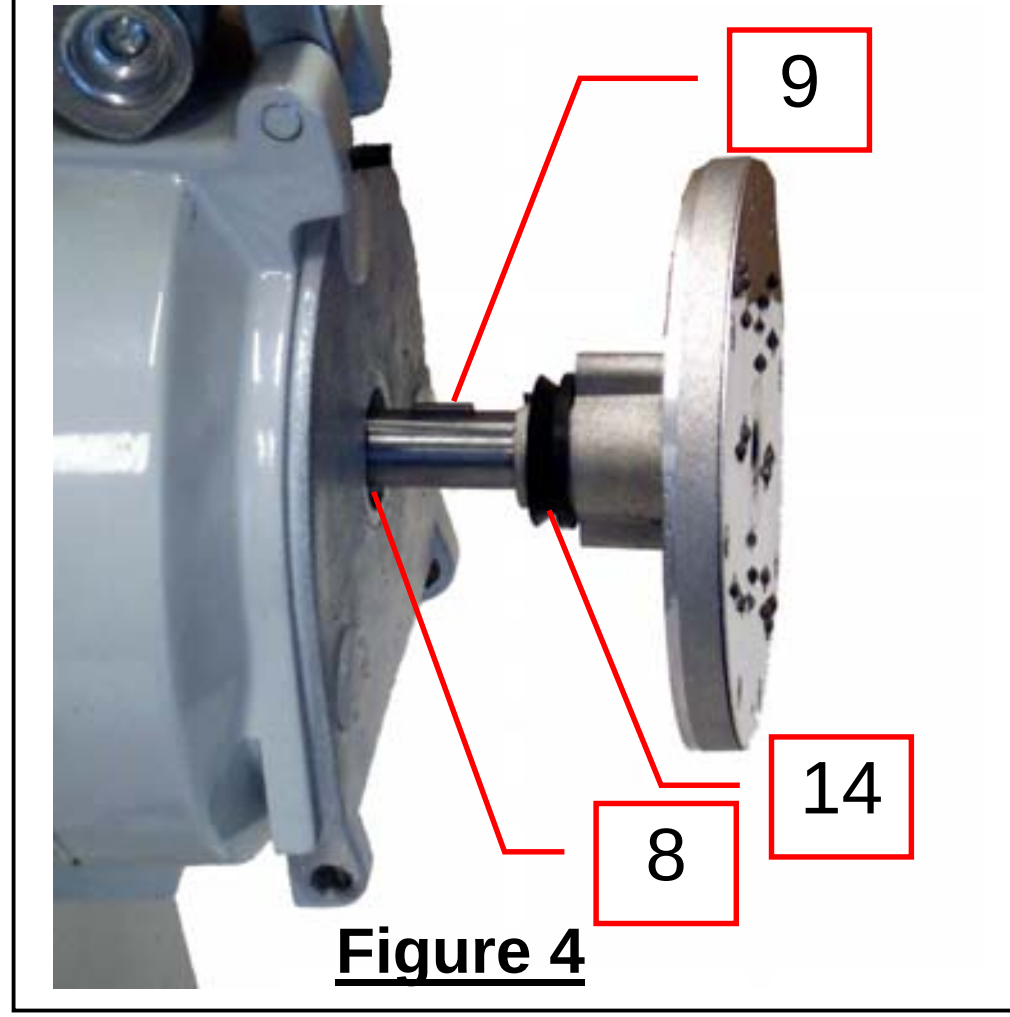


Figure 4



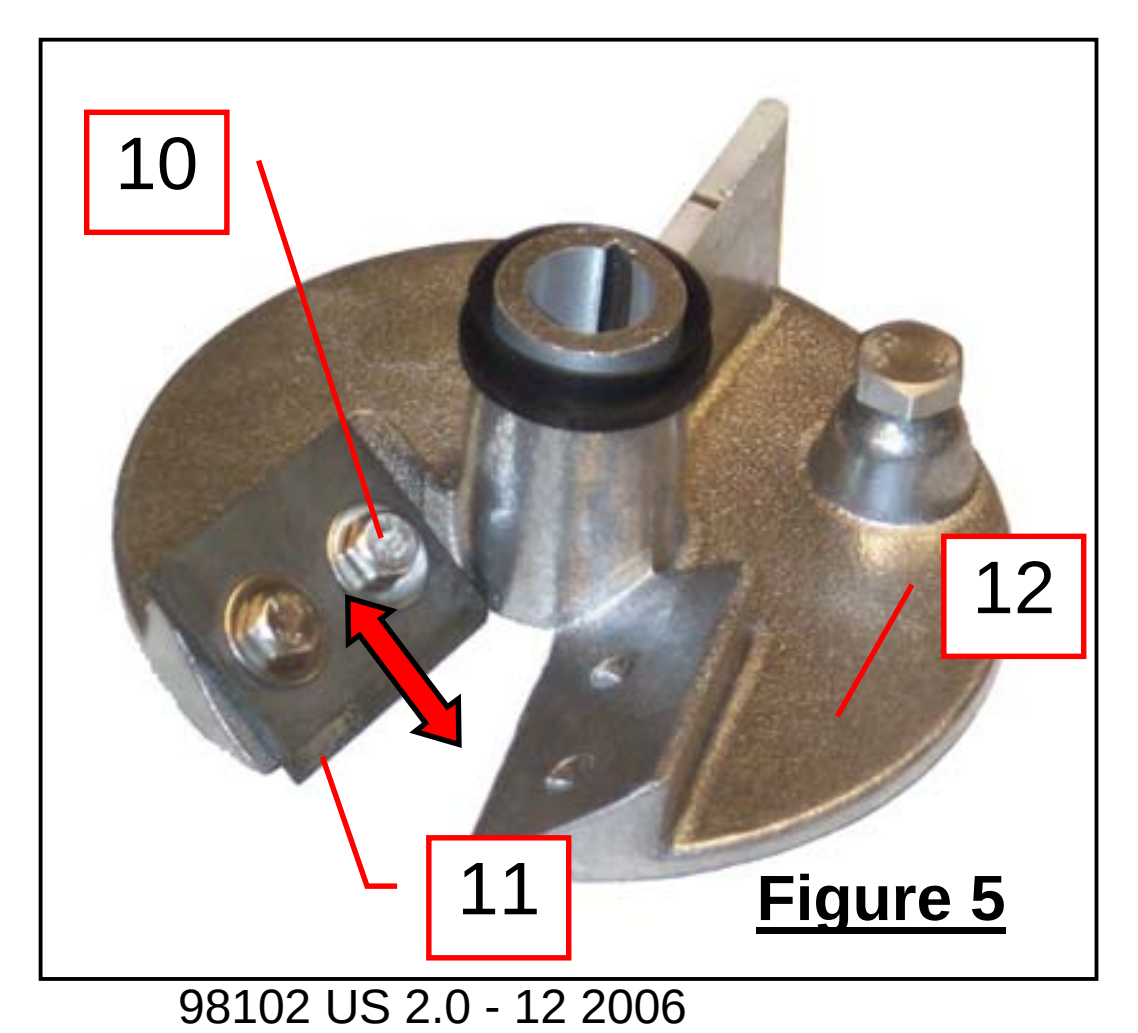


Figure 5


Figure 6

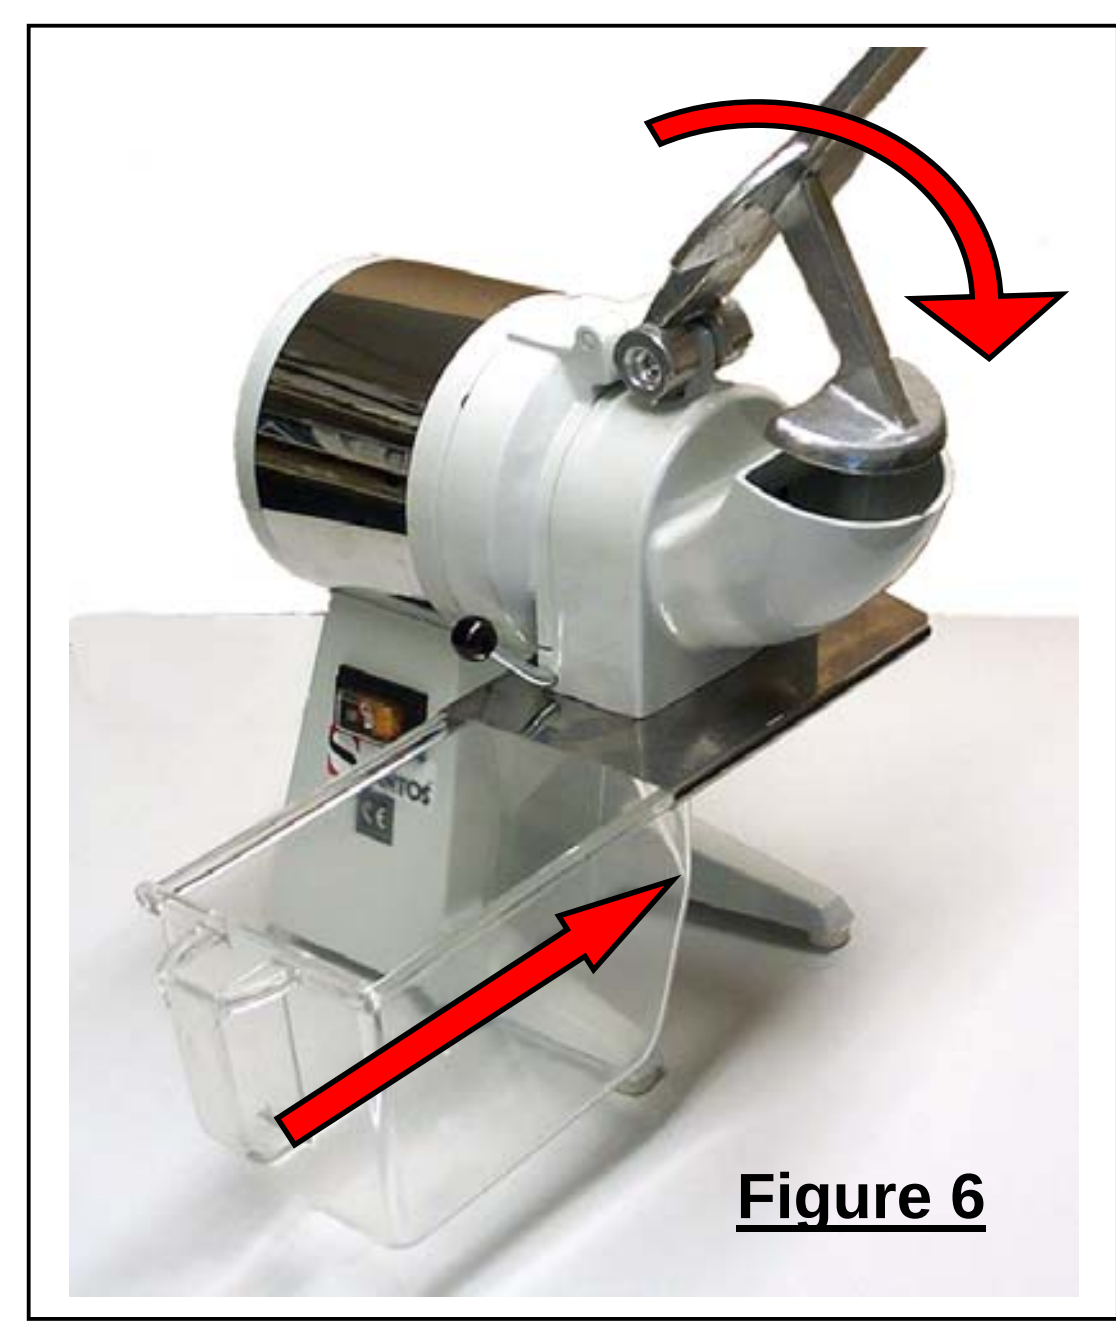



220-240V 50Hz wiring diagram

Marron
M
Noir
Condensateur
Blanc
Blanc 5
2
4
3
Sécurité levier
Noir 2
Relais de démarrage
Marron 4
4
3
Marche/Arrêt
U<
P1
P2
Sécurité tiroir
Blanc 1
Blanc 1
~
Noir 3
Vert/Jaune 9



110-120V 50/60Hz wiring diagram

Bleu

Noir

Condensateur

Jaune

M

Marron

Blanc 5

Blanc

Rouge

2

4

3

Sécurité levier

Marron 4

Noir 2

Relais de démarrage

4

3

Marche/Arrêt

U<

P1

P2

Sécurité tiroir

Blanc 1


Blanc 1

Blanc

~

Noir

Noir 3





220-240V 60Hz wiring diagram

Rouge
Blanc
Jaune
Noir
M
Bleu
Condensateur
Marron
Blanc 5
2
4
3
Marron 4
Relais de démarrage
Sécurité levier
Noir 2
4
3
Marche/Arrêt
U<
P1
P2
Sécurité tiroir
Blanc 1
Blanc 1
Blanc
~
Noir
Noir 3
Vert / jaune 9



TRANSLATION CHART FOR ELECTRICAL COMPONENTS

F	GB
Condensateur	Capacitor
Protecteur thermique	Thermals cut-out
Relais de démarrage	Starter relay
Marche/Arrêt	On/Off Switch
Micro-interrupteur	Micro-Switch

TRANSLATION CHART FOR WIRE COLORS

F	GB
JAUNE	YELLOW
BLANC	WHITE
NOIR	BLACK
BLEU	BLUE
ROUGE	RED
MARRON	BROWN
ORANGE	ORANGE
VERT / JAUNE	GREEN / YELLOW

TRANSLATION CHART FOR COMPONENTS

REP	Designation
1	Drawer to catch the food
2	Slideway to support drawer
3	Chute to insert the food
4	Lever
5	On-off switch
6	Complete disc
7	Locking screw for the disc
8	Spacer
9	Key
10	Fastening screw for the ice crusher knife
11	Ice crusher knife
12	Ice crusher knife support
13	Capacitor
14	Seal
15	Locking pin for the chute